## 深圳市德润照明有限公司

LED 全彩控制器说明书



1. Overview:

1, the control can be equipped with mini SD.

2, no SD boot automatically after 20 seconds to call built more than 100 kinds of patterns, you can send a DMX512 and TTL signals.

3, lower D card status, using standard DMX512 choose built-in patterns and speed.

4, more than one, the synchronization signal is recommended not more than 50 meters, measured 100 meters.

5, the maximum drive 2048 pixels. Refresh rate up to 30 frame rate (<512 pixels).

6, the maximum distance between the controller and lighting TTL is <15 m; 485 <30 meters. TTL can be connected simultaneously and about 10.

| Operating Voltage | DC12-24V        |
|-------------------|-----------------|
| size              | L122 *W 73* H25 |
| weight            | 0.2Kg           |
| Power             | 3W              |

二、Support IC:

| Support IC                                  | Detailed model                                      |
|---|---|
| ТМ  | TM1809, TM1812 , TM1914                             |
| UCS   | UCS2903,UCS2909,UCS2912 UCS1903,UCS1909,U<br>CS1912 |
| WS  | WS2801,WS2812 WS2811                                |
| INK1003                                     | INK1003   |
| LPD   | LDP6803,LDP8806,LDP1109                             |
| D705  | D705  |
| SM  | SM16716,SM16715                                     |
| DMX512                                      | DMX512  |
| Other models, please contact us for advice. |   |
|   |   |

## 深圳市德润照明有限公司

LED 全彩控制器说明书

 $\Xi_{s}$  Controller priority read SD card, when no SD Card running the built-in pattern.

SD card status, you can select the pattern and speed through the key, which [on / off] key is invalid. Other operations without card, as detailed below.

4.Wiring Method

TTL: Wire-line and signal interface.

DAT: CLK: GND:

DMX512: Choose model DMX512 when send dmx512 signal, Other models when transmitting differential signals: With 485 receiving plate so that the signal transmission farther.

D+: DMX512 signal A ,D-: DMX512 signal B ,GND: Normally without wiring.

1.V. Instructions

2.election IC Type:

First press [ON / Off] key to display OFF to enter programming mode Then press [Mode / Speed] options, choose the right model and then take [On / off] key to exit.

## 3.control points set

First press [ON / Off] key to display the OFF program state, [UP] and [DOWN] set points. Then [On / off] key to exit.

4.set the pattern, speed, and DMX address

Under normal conditions, that is not in the OFF state. Press the [mode / off] key to cycle through the digital beginning of the following PSA.

P S on behalf of the representative of the pattern speed A representative of DMX512 address, attention is only useful when the DMX address decoding and DMX512 standard DMX512 console control built-in patterns. Increases and decreases with the UP and DOWN keys.

5.Precautions:

1 Please note that when you install rain, the normal operating voltage recommended as DC12-24V.

2, network lines correspond to straight butt.

